


- Never allow a child under 6 years of age on upper
- bunk
 Use only mattress meeting the following specifications on upper bunk:

B <u>ed Typ</u> e	L <u>engt</u> h	<u>Width</u> s
CPBS-3854-76	76"	38 & 54"
CPBS-3854-80	80"	38 & 54"



STRANGULATION HAZARD— Never attach or hang items to any part of the bunk bed that are not designed for use with bed end; for example, but not limited to, hooks, belts, and jumpropes.



DO <u>NOT USE POWER TOOLS TO ASSEM</u>BLE

Instruction Manual


PLEASE READ BEFORE ASSEMBLY OF BUNK BED

- PLEASE FOLLOW ALL INFORMATION LISTED ON WARNING LABELS FOUND ON THE BUNK BED
 AND ALL PACKAGING. DO NOT REMOVE ANY AND ALL WARNING LABELS FROM THE BED
- . DO NOT ALLOW CHILDREN UNDER 6 YEARS OF AGE TO USE UPPER BUNK BED
- . DO NOT ALLOW HORSEPLAY ON OR UNDER THE BED
- USE ONLY A MATTRESS WITH THE DIMENSIONS: HEIGHT OF 6" MAX FOR ALL MODELS

Bed	Type	<u>Length</u>	<u>Widths</u>
CPBS-3	854-76	76"	38 & 54"
CPBS-3	854-80	80"	38 & 54"

- THE SURFACE OF THE MATTRESS MUST BE AT LEAST 5 INCHES BELOW THE UPPER EDGE OF THE GUARDRAILS. MATTRESS CANNOT EXCEED THESE DIMENSIONS FOR ANY REASON.
- USE OF WATER OR SLEEP FLOTATION MATTRESS IS PROHIBITED FOR ANY SLEEPING SURFACE
- DO NOT SUBSTITUTE PARTS SUPPLIED WITH THE BED. REPLACEMENT PARTS CAN BE PURCHASED BY CONTACTING US AT 800.969.4100
- USE OF GUARDRAILS ON UPPER BUNK IS REQUIRED AT ALL TIMES. IF THE BUNK BED IS PLACED NEXT TO A WALL, THE FULL LENGTH GUARDRAIL SHALL BE PLACED AGAINST THE WALL TO PREVENT ENTRAPMENT BETWEEN BED AND WALL
- PERIODIC INSPECTION OF GUARDRAILS, LADDERS AND OTHER COMPONENTS IS REQUIRED BY
 END USER TO CONFIRM THEY ARE IN PROPER LOCATION, FREE FROM DAMAGE AND THAT
 ALL CONNECTORS ARE TIGHTLY SECURED. RECOMMENDED USE OF NIGHT LIGHT MAY
 PROVIDE ADDED SAFETY PRECAUTION FOR A CHILD USING THE UPPER BUNK ALWAYS USE
 LADDER TO ACCESS THE UPPER BUNK.
- NEVER ATTACH OR HANG ITEMS TO ANY PART OF THE BED THAT ARE NOT DESIGNED TO BE USED WITH THE BED.
- KEEP INSTRUCTIONS/WARNINGS FOR FUTURE REFERENCE
- 2 PERSON ASSEMBLY REQUIRED



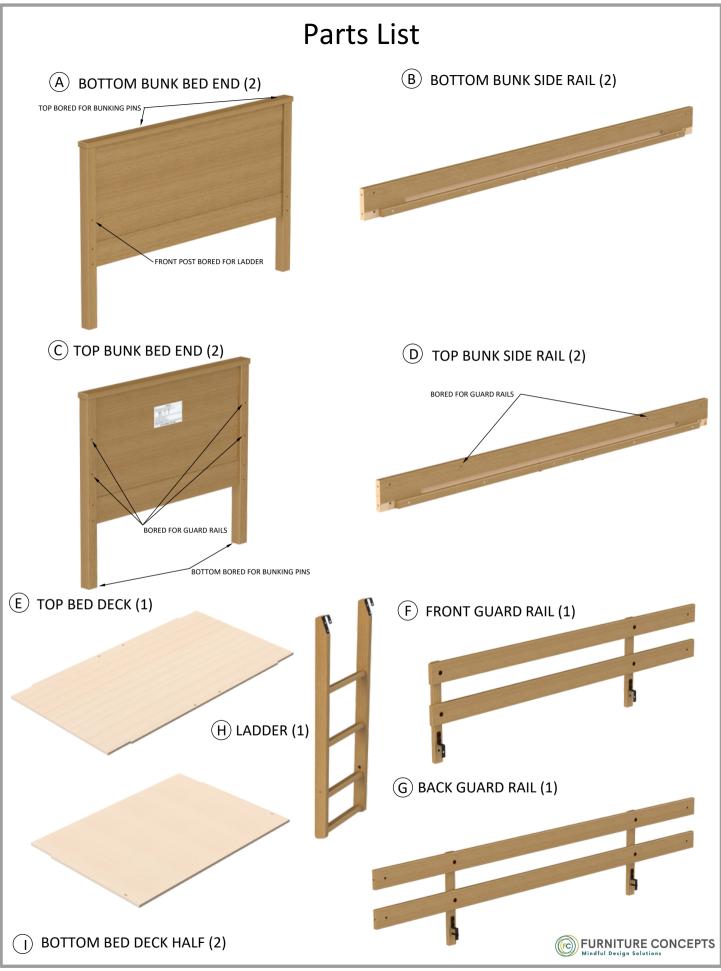

CPBS-3854 Hardware List

H1—(8) Bolt Connector 45mm

H2—(22) Bolt Connector 120mm

H3—(22) Cross Dowel

H4 —(4) Bolt Connector 40mm

H5-(4) Bunking Pin H6-(1)

Flat Head Screw #12 x 1"

H7—(3) Cap Nut Hex Head H8

—(3) Bolt Connector 50mm

H9—(1) Bolt Connector 80mm

H10-(1) Bolt Connector 25mm



Tools Required

T1 - Phillips Head Screw Driver

T2 - 4mm Hex Head Allen Key

T3 - Flat Head Screwdriver

T4 - Tape measure



DO NOT USE POWER TOOLS TO ASSEMBLE

***Note: 2 PERSON REQUIREMENT FOR ASSEMBLY ***

!! Before Assembling Bed !!

Determine left or right ladder position before assembly of bed.


Refer to instructions for guard rail reversal on Page 10 if necessary.



Top Deck Assembly
2 PERSON ASSEMBLY

1

1/2" offset

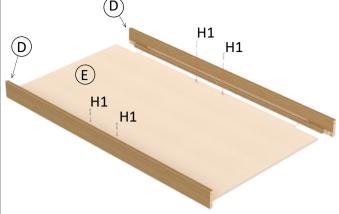

Assemble (E) bed deck and (D) side rails.

Make sure both rails match, and have holes for guard rails.

Offset deck 1/2" inch

from end of rails. Secure rails with 4 x


(H1) screws inserted through slots in deck into inserts in rails. Do not fully tighten.

Top Bunk Assembly
2 PERSON ASSEMBLY

Make sure side rails with guard rail holes are paired with bed ends with guard rail holes and have bunking holes in bottoms of posts.

Secure deck and rails to bed ends with (H2) 120mm bolts and (H3) cross dowels. Tighten all bolts.



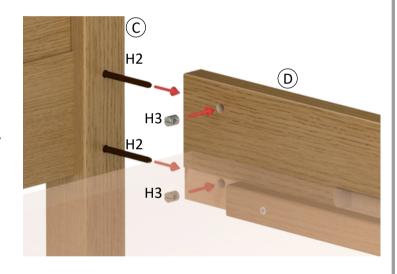

Top bed should have bunking holes on bottom and guard rail holes in posts and side rails.



C

Guard Rail Installation


4


Place (F) front and (G) back guard rails onto bored side rails of top bunk (D). Make sure front guard rail is the desired left or right configuration.



D

Secure guard rails to bed end posts with (H2) 120mm bolts and (H3) cross dowels, and into side rails with (H4) 40mm bolt connectors.

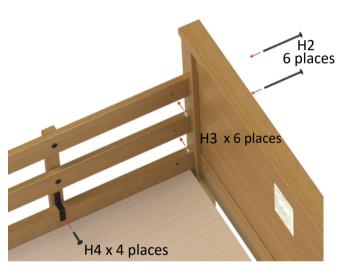

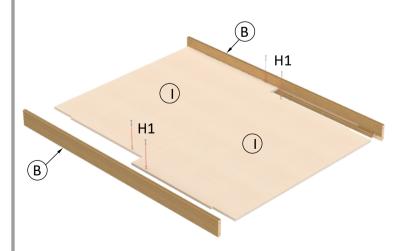

Bottom Deck Assembly
2 PERSON ASSEMBLY


6

Insert the tabs of the split decks centered along the side rails (with no holes for guard rails) and secure with bolts. Do not fully tighten.



Bottom Bunk Assembly
2 PERSON ASSEMBLY

7

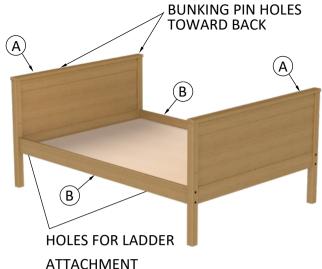

Attach bottom deck assembly to wide bed ends using bolts and cross dowels in step 2. Make sure bunk holes are offset to the back side of bed and the holes for ladder attachment are in the front. Fully tighten all bolts.

8

TOWARD FRONT


Bunking Beds

2 PERSON ASSEMBLY REQUIRED

Place (H5) bunking pins into all 4 bunking holes of bottom bed.

Lift top bunk and place onto bottom bunk, inserting pins into the bottoms of the posts of the top bunk.



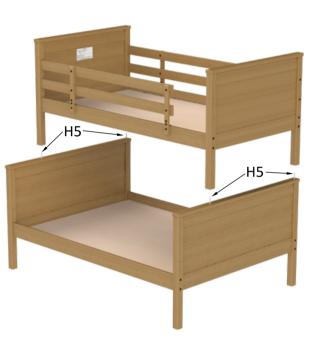


Ladder Placement

Place (H) ladder into opening making sure hooks slide down over side rail of top bunk





op /

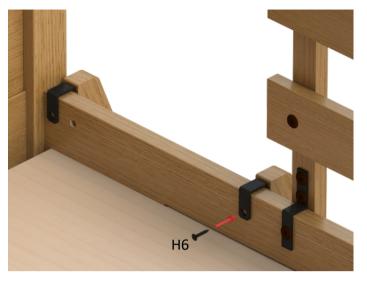

Ladder Securement-top -REQUIRED-

Attach H6 (required) flat head screw into ladder hook and side rail of top bunk, using hook closest to guard rail.


Ladder Securement—bottom -REQUIRED-

Attach (H9) 80mm bolt through end post and (H10) 25mm bolt into unattached leg of ladder into pre-installed inserts.



Finishing

9

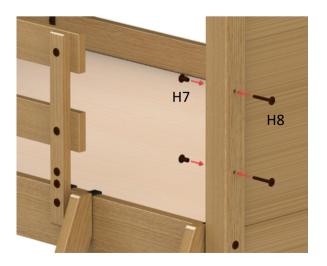


Install (H7) cap nuts & (H8) 50mm bolts into unused holes in front post of top bed end above ladder



Finishing


10

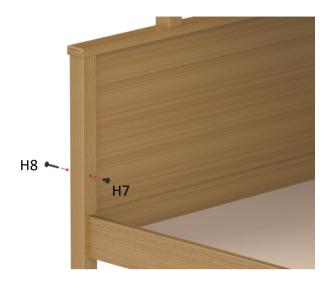

Install (H7) cap nut & (H8) 50mm bolt into empty hole in front post of bottom bed end opposite of ladder.



OPTION — Left/Right Front Guard Rail Reversal

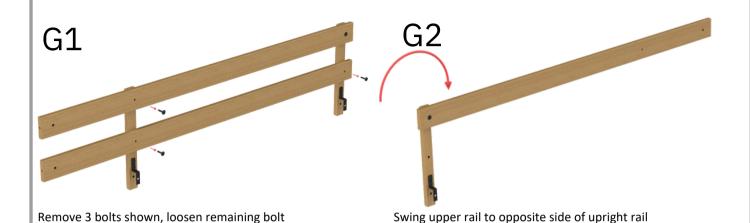



Insert bolt into upper rail as shown. Do not fully tighten.



Insert bolts into lower rail as shown. Do not fully tighten.

G5

Attach guard rail to top bunk as shown in steps 4 & 5.

Tighten bolts loosened during guard rail reversal.

