

TWIN / FULL / QUEEN ASSEMBLY INSTRUCTIONS

Step 1

Swing out CROSS ARMS to 90 degrees. See Figure 1.

Step 2

Determine desired bed size (Twin, Full or Queen). Overlap CROSS ARMS and engage SHOULDER RIVETS into proper keyholes. See Figure 2.

Note: Both rivet heads must engage in keyhole slots.

Step 3

Secure tightly CROSS SUPPORT (if provided) to side rails with NUTS and BOLTS as show in Figure 3.

Step 4

Install accessories as shown in Figure 4. It may be necessary to tap PLASTIC SOCKETS into place. Casters with Brake if provided, should, be installed on the corner legs at the foot of the bed frame

Step 5

Slide SHEET PROTECTORS onto side rails. See Figure 5

Note: Twin size doesn't require cross support.

Figure 1.

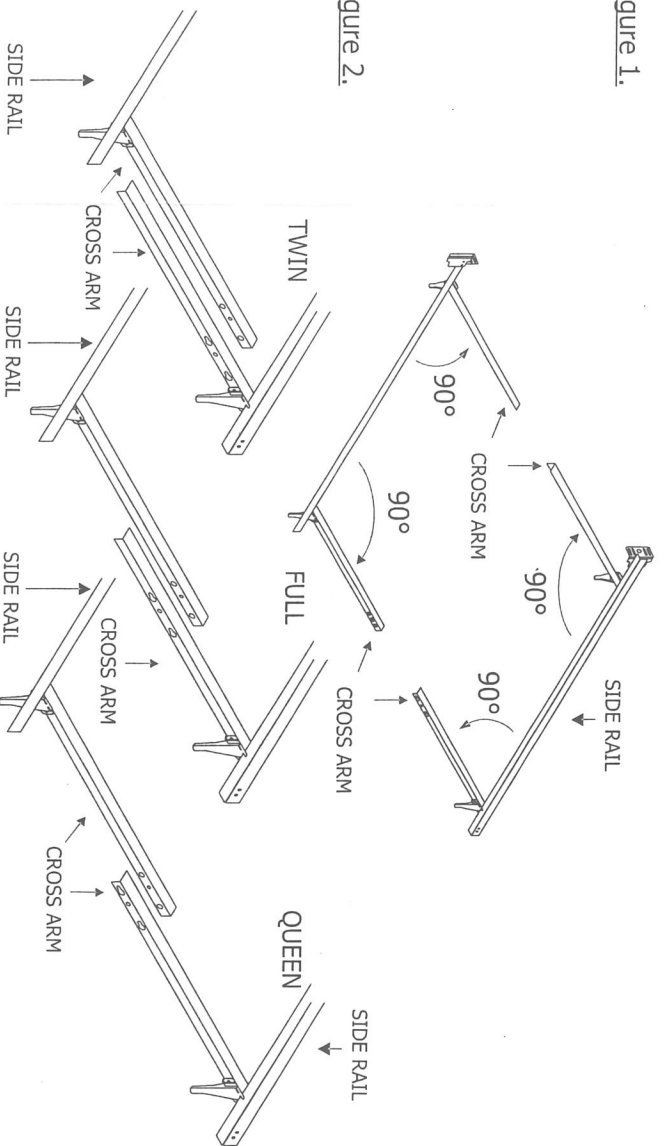


Figure 2.

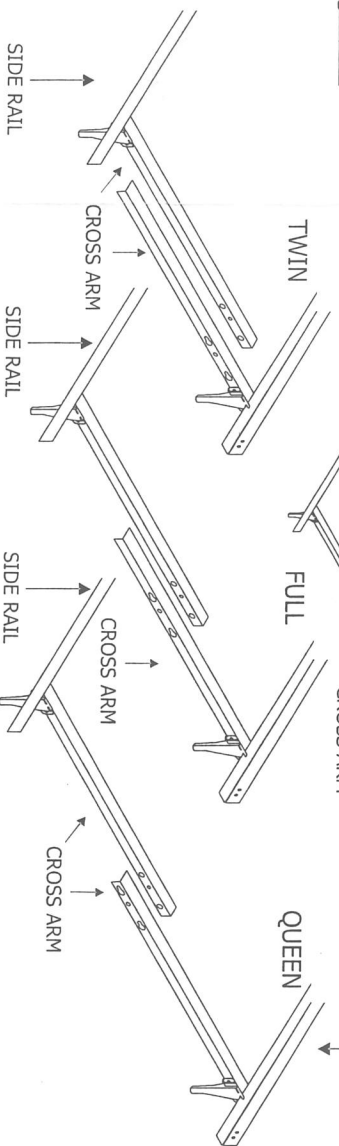


Figure 3.

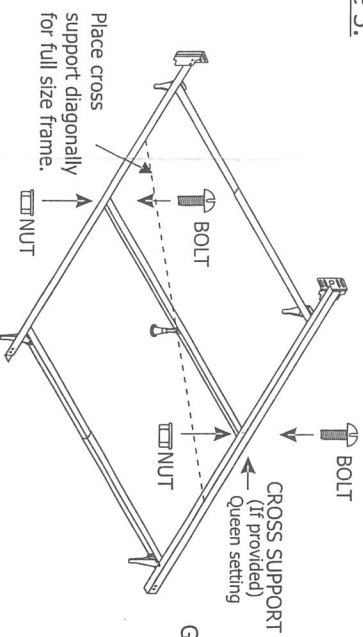


Figure 4.



Figure 5.

