


Assembly Instructions

Black Stamped Steel 'T' Table Bases

What you will need for assembly:



Drill driver
or
screwdriver

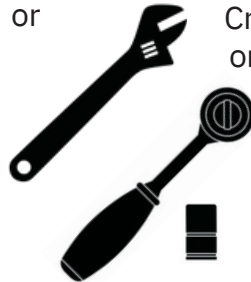


Crescent wrench
or
socket set



Tape measure

What's in the box:

(8) 3/4" #10 screws
per base

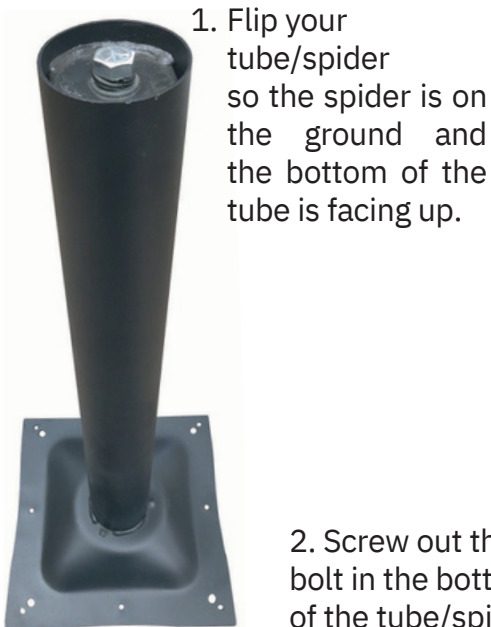

1. Flip your tube/spider so the spider is on the ground and the bottom of the tube is facing up.



2. Screw out the short bolt in the bottom of the tube/spider.



3. Place the 't' foot on the tube.

4. Using the socket set or crescent wrench, screw in the short bolt with lock washer and flat washer into the tube




5. Locate the leveling glides and screw into the welded end tabs of the 't' foot.



6. Your table base is now ready to be mounted to the table.


7. Place the table base onto the bottom side of the table.

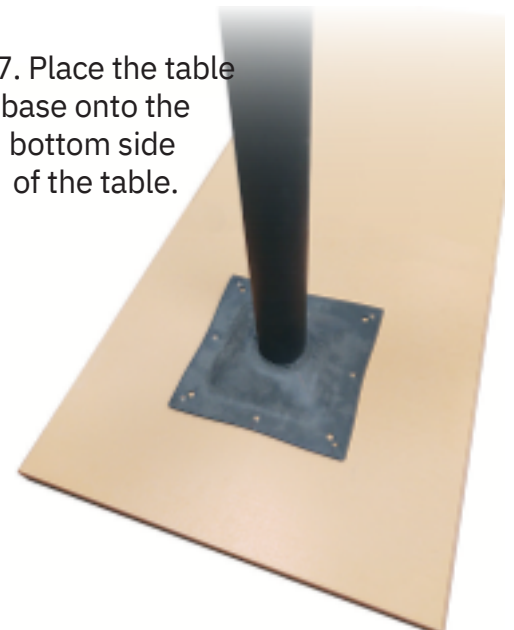

9. Use the 8 perimeter holes on the spider (circled in yellow) to fasten the base to the table top.



8. Measure from the table end. The base can either be 12" from the edge of spider to table edge, or 12" on center from table edge - depending on the need.

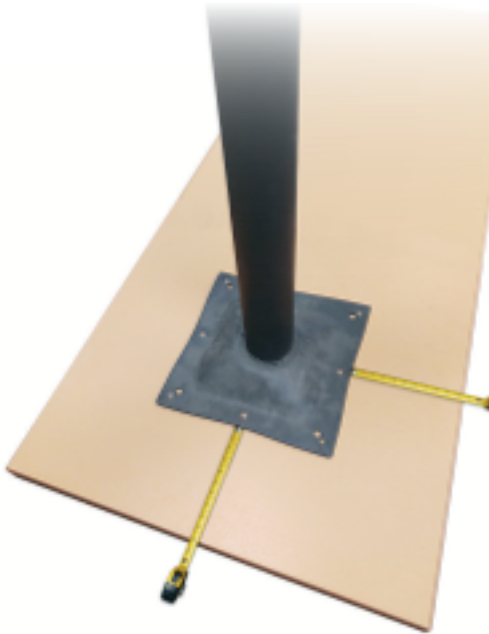


Then measure from the spider's edge to the sides of the table to ensure it's centered.

10. Using the screwdriver or drill driver and (8) 3/4" #10 screws, fasten the base to the table top.



11. Repeat steps 1-9 with the other 't' base on the opposite end of the table.

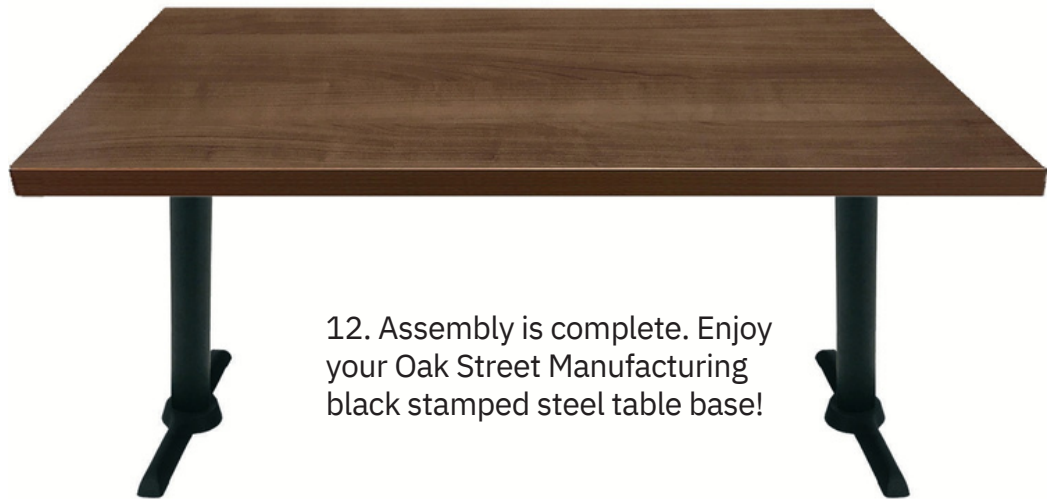

12. Assembly is complete. Enjoy your Oak Street Manufacturing black stamped steel table base!